


Tile Detail

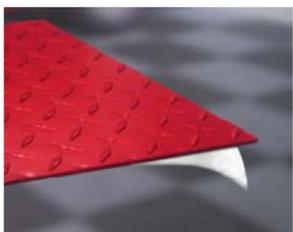

Installation Instructions

1. Site condition MaxTile™ by allowing it to come to room temperature (72°F) for a period of 24 hours prior to installation.
2. MaxTile™ can be cut to size or shape by using a saw. For best cutting results, use saw blades designed to cut 1/16" thick metal (also known as "sheet metal").
3. IMPORTANT—Start laying tile at any one corner of the space to be covered.
4. Set the first MaxTile™ tile (marked #1 below).
5. Peel off paper liner and lay the tile immediately. Do not keep the adhesive exposed to the air for more than a minute as the adhesive will begin to dry immediately and adhesion strength will decrease.
6. For easiest tile positioning, make contact with one corner of the tile first and then let the entire tile make contact.
7. Once the entire tile has been laid, immediately use a rolled up rag or towel and apply good pressure over the entire tile to adhere it. It is important to apply this pressure immediately otherwise any existing air gaps will immediately begin to dry the adhesive.
8. Add the second tile next (marked #2 below)
9. Keep adding tiles to the first row in this manner
10. When the first row is complete, start the second row
11. If a tile needs to be removed, do it right away as the high strength adhesive gets stronger over time. Use a prying device, such as a flat head screwdriver, and pry the tile off starting from any corner. Warning—it will take considerable strength to remove a tile and the tile will be left unusable
12. CAUTION: Even though a freshly painted wall feels dry to the touch, it may not be fully cured. Freshly painted walls can continue to evolve volatile oils (VOC) for weeks which will reduce the adhesion bond strength significantly and cause the product to lift off wall after some time. Consult your paint supplier to determine adequate cure time for the type of paint used and room environment present. Depending on the brand of paint, 8 week cure times are not uncommon. To re-attach product to wall, use a "super glue" type of adhesive or finishing nails as described above.
13. If walls are bowed, a corner of tile may lift off wall after some time. Fasten product to the wall using either:
 - > liquid adhesive: cyanoacrylate ("super glue" type) or an epoxy type
 - > small finishing nails: for best results, hammer finishing nails into wall at slight angles. One finishing nail per corner is adequate. Pre-drilling holes are optional

