

# Installation Instructions

## Flexible Corner Guards

### Parts

Item Number	Description
3436F	3/4" x 3/4" x 3', 90°, Flexible Corner Guard
3448F	3/4" x 3/4" x 4', 90°, Flexible Corner Guard
3496F	3/4" x 3/4" x 8', 90°, Flexible Corner Guard
3409F	3/4" x 3/4" x 9', 90°, Flexible Corner Guard
3412F	3/4" x 3/4" x 12', 90°, Flexible Corner Guard
436135F	3/4" x 3/4" x 3', 135°, Flexible Corner Guard
448135F	3/4" x 3/4" x 4', 135°, Flexible Corner Guard
496135F	3/4" x 3/4" x 8', 135°, Flexible Corner Guard
409135F	3/4" x 3/4" x 9', 135°, Flexible Corner Guard
412135F	3/4" x 3/4" x 12', 135°, Flexible Corner Guard
11236F	1-1/2" x 1-1/2" x 3', 90°, Flexible Corner Guard
11248F	1-1/2" x 1-1/2" x 4', 90°, Flexible Corner Guard
11296F	1-1/2" x 1-1/2" x 8', 90°, Flexible Corner Guard
11209F	1-1/2" x 1-1/2" x 9', 90°, Flexible Corner Guard
11212F	1-1/2" x 1-1/2" x 12', 90°, Flexible Corner Guard
236135F	1-1/2" x 1-1/2" x 3', 135°, Flexible Corner Guard
248135F	1-1/2" x 1-1/2" x 4', 135°, Flexible Corner Guard
296135F	1-1/2" x 1-1/2" x 8', 135°, Flexible Corner Guard
209135F	1-1/2" x 1-1/2" x 9', 135°, Flexible Corner Guard
212135F	1-1/2" x 1-1/2" x 12', 135°, Flexible Corner Guard

**Refer to packing list for specific parts ordered.**

### Recommended Tools

Safety Glasses  
 Tape Measure  
 Level  
 Power Miter Saw (if cutting)  
 10" Blade with 60-80 Carbide Tipped Teeth

### Fasteners

Part	Hardware Kit Number	Fastener Number	Quantity	Recommended Adhesive	Drill Size
Flexible Corner Guard	--	--	--	PL Premium	--



### Installation Questions?

Contact our Installation Hotline 866.EZINPRO  
 For Sales & Customer Service call 800.222.5556

# Installation Instructions

## Flexible Corner Guards

FIG. 1a


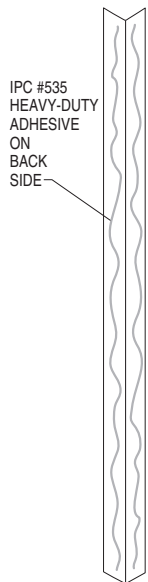


FIG. 1b

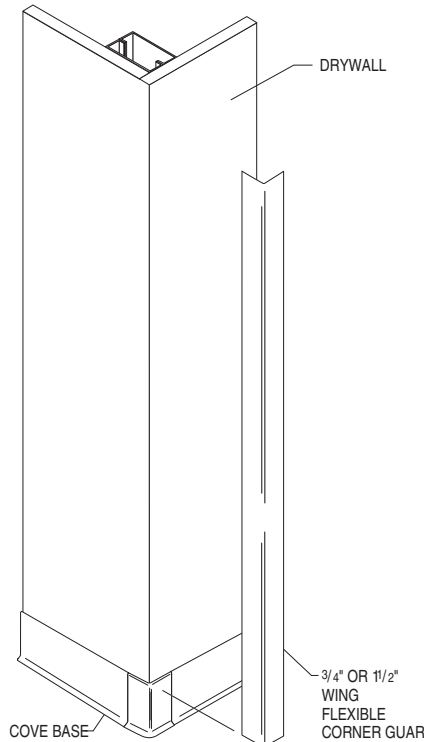

**Please read all instructions before installing corner guards.**

**Material must be stored, installed and used in environmentally controlled conditions.**

**1. Prior to installation:**

- a. Allow corner guards to reach room temperature before installing.
- b. The wall surface that the corner guards are to be applied must be dry and free of dirt, dust, oil, loose pain, wax and grease.
- c. Twelve foot corner guards may be folded for shipment via UPS. Allow the corner guards to lie flat for 24 hours before installation.

- 2. Use IPC #535 Heavy-Duty Adhesive to adhere corner guards.** Apply a bead of IPC #535 in a zig-zag pattern over the back of the corner guard. See Figure 1a. Immediately position corner guard on the wall and apply pressure until a tight fit is achieved. An extension roller will aid this step. Additional bracing may be required during installation to insure complete contact with the wall. See Figure 1b.

Adhesive Coverage: One 10.6 oz cartridge of IPC #535 Heavy-Duty Adhesive will adhere the following corner guards based on an approximate cover of 70 lf per cartridge.

Wing Size	Height	# of Corner Guards per cartridge
3/4", 1-1/2"	3'	11
3/4", 1-1/2"	4'	8
3/4", 1-1/2"	8'	4
3/4", 1-1/2"	9'	3
3/4", 1-1/2"	12'	3



**Installation Questions?**

Contact our Installation Hotline 866.EZINPRO  
For Sales & Customer Service call 800.222.5556