

Instructions

Tile Types



Liquid Silver™



Lava Red™



Diesel Black™



Border Hooks




Border Loops



Corner

Installation Instructions

1. Site condition XFloor™ by allowing it to come to room temperature (72°F) for a period of 24 hours prior to installation.
2. An expansion gap of 1/4" (6mm) is required around walls and other obstacles such as beams, cabinets and other equipment. Tiles should be laid around heavy equipment and not under them to allow for expansion and contraction.
3. XFloor™ can be cut to size or shape by using a saw. For best cutting results, use saw blades designed to cut sheet metal 1/16"tk.
4. XFloor™ tiles attach with a loop & hook system. The loops of one tile snap into the hooks of another tile. :

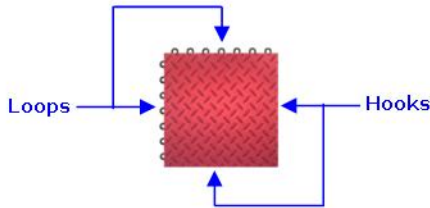

5. IMPORTANT—Start laying tile at the bottom left hand corner of the space to be covered.
6. Set the first XFloor™ tile (marked #1 below) paying special attention to which direction the loops of the tile are facing.
7. Add the second XFloor™ tile (marked #2 below) to its right, so that its loops are facing the same way as tile #1. If you are planning to use border tiles, attach them along the way.
8. Keep adding XFloor™ tiles to the first row in this manner making sure that the loops of the tiles are always facing the same way.
9. When the first row is complete, start the second row - always keeping the loops facing the same way, and so on and so on.
10. Suggestion: XFloor™ tiles install easiest when you align the loops and hooks first and then apply pressure from your hand or the heel of your foot to make them snap together!

