

# Installation Instructions

## Nu·Tree Diamond Plate Sheet

FIG. 1


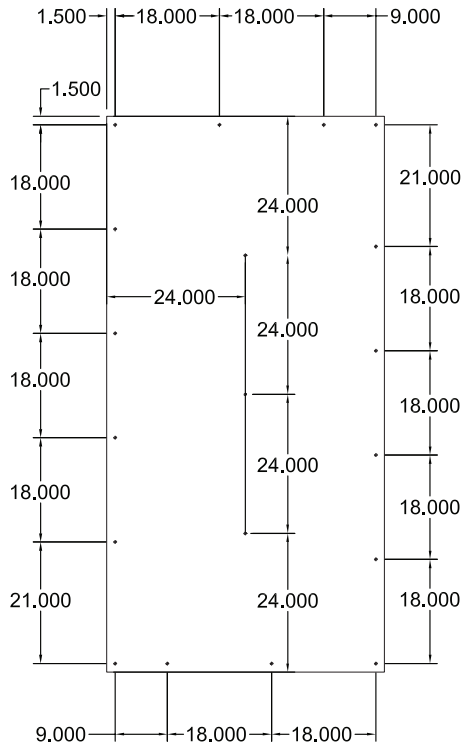


FIG. 2

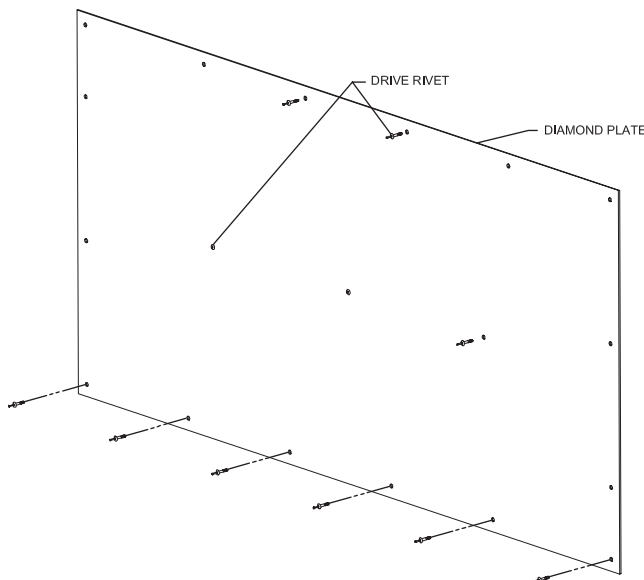

**Please read all instructions before installing sheet material.**

Before installation:

- a. Acclimate Diamond plate sheet and wall substrates to room temperature 24 hours before installation
- b. 24 hours before, during and 48 hours after installation, maintain a building temperature between 70-80 °F and keep humidity below 80%
- c. Substrate must be dry.

1. Install sheets level and plumb. Snap a chalk line to help maintain level during the installation. Pre-fit each panel before fastening. Leave an 1/8" gap when butting against other sheet or surfaces. This includes flooring, and ceilings.
2. Drill 5/16" holes around the perimeter of the 4' x 8' sheet, 1 1/2" in from edges. Follow the pattern in figure 1. Drill 5/16" holes in the field of the sheet following the pattern in figure 1.
3. Hold the sheet in position on the wall and transfer the hole locations to the wall.
4. Drill 1/4" holes at each mark.
5. Hold the sheet against the wall. Start in the middle of the sheet and insert the drive rivet into a hole.
6. Hammer the plastic pin into the rivet until the pin is flush with the head of the rivet.
7. Continue fastening the panel to the wall with drive rivets working from the center and working outward.
8. Seal edges and gaps with clear silicone caulk.

IPC.556/REV.1

**Installation Questions?**

Contact our Installation Hotline 866.EZINPRO  
For Sales & Customer Service call 800.222.5556